
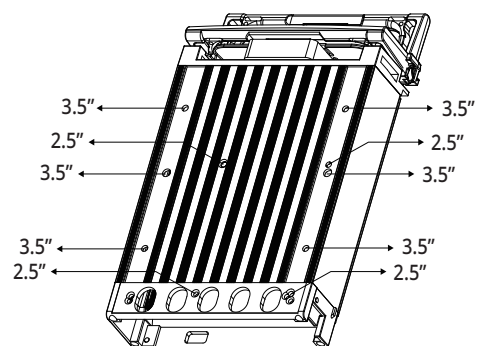



User Manual

ST-135 SATA Mobile Rack

Assembly instructions


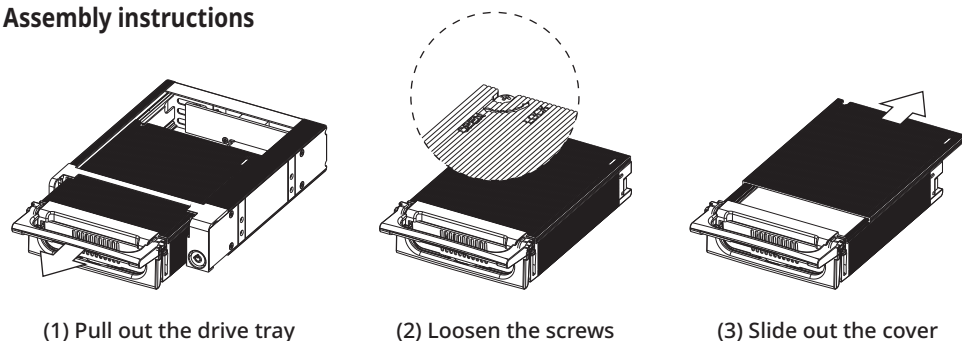


(4) Secure the HDD or SSD according to the screw hole alignments

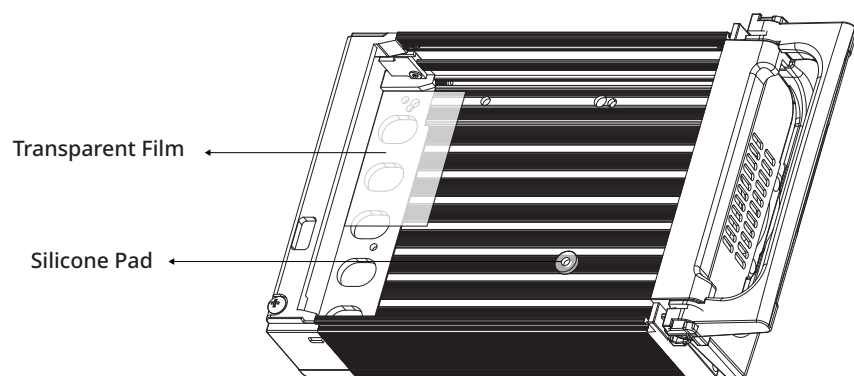

(!) For 2.5" SSD/HDD installation, apply the silicone pad and transparent film inside the drive tray as shown in the diagram.

Front Panel Description

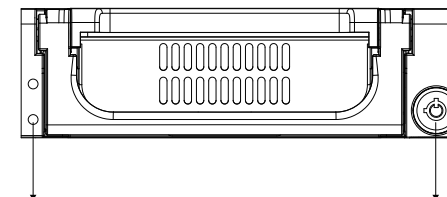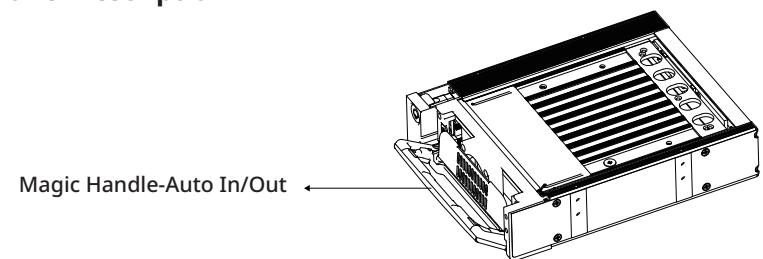


LED indicator

- Power on : Green
- HDD access : Blinking Yellow

Power control key lock

- Turn right to open and Turn left to lock

Rear Panel Description

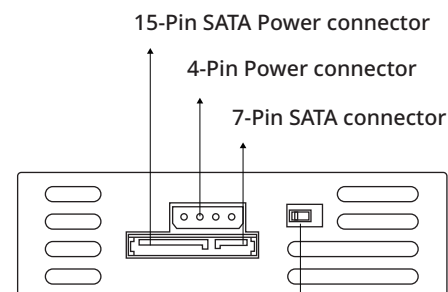

HDD LED SWITCH

ENABLE:

The front HDD access LED works normally.
Blinking yellow indicates HDD activity.

DISABLE:

The front HDD access LED is disabled.

Note:

Some HDDs may work normally when connected directly to the motherboard, but may not be detected or may not operate properly when installed in this mobile rack with the HDD LED function enabled. If this occurs, set the DIP switch to DISABLE to allow the HDD to operate normally.